

# Penn State Harrisburg Library

## DVD/VCR Combo Player Instructions



Instructions for using the Toshiba SD-V290 DVD/VCR combo player and Panasonic CT-27D12DF color television located in the Periodicals area on the second floor of the Penn State Harrisburg Library.

### Turn on the Equipment

- Press **Power** on the TV.
- Press **On/Standby** on the DVD/VCR combo player.

### Choose DVD or VCR

- Press **DVD/VCR Select** on the DVD/VCR combo player to choose the appropriate format (**DVD** for DVD discs or **VCR** for VHS video cassettes).

### Select TV Channel and Video Input Mode

**Please note:** This step is only necessary if there's no output on the TV screen after inserting a DVD or videotape.

- Press **Channel ▼** or **▲** to select **Channel 3** on the TV.
- Press **TV/Video** to select **Video 2** on the TV.

### Headphones and Remote Controls

Headphones and a remote control for the DVD/VCR combo player are available for sign-out at the Circulation/Reserves desk on the first floor.

### Assistance

For assistance, please go to the Periodicals Information desk near the stairway on the second floor or the Circulation/Reserves desk on the first floor.